

Mini Free Mount Cylinder

 
Series CUJ

ø4, ø6, ø8, ø10


Replacement
Procedure is
P.289

Construction

Double acting

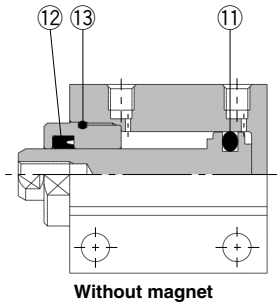

Single acting, spring return

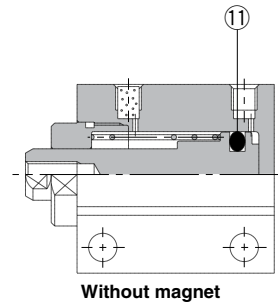 

* The numbers are the same as the "Construction" of the Best Pneumatics No.2 Series CUJ.

Seal Kit List

No.	Description	Material	Note
①	Piston seal	NBR	
⑫	Rod seal		
⑬	Tube gasket		

*[BLUE](#) links will lead to purchase pages.

Replacement Parts: Seal Kit

Bore size (mm)	Kit no.	Contents
Double acting		
4	CUJB4-PS	Set of left nos. ①, ⑫, ⑬ and grease pack.
6	CUJB6-PS	
8	CUJB8-PS	
10	CUJB10-PS	

* Seal kit ① to ⑬ comes as a set. Use the kit number for each bore size.

Single acting, spring return

4	CUJB4-S-PS	Set of left nos. ① and grease pack.
6	CUJB6-S-PS	
8	CUJB8-S-PS	
10	CUJB10-S-PS	

* Use the following part number for ordering a grease pack only.
Grease pack part no.: GR-L-005 (5 g)

Actuators

Modular F.R.L.
Pressure Control Equipment

Air Preparation
Equipment

Industrial Filters

Replacement
Procedure

Actuators

Modular F.R.L.
Pressure Control Equipment

Industrial Filters

Mini Free Mount Cylinder

 
Series CUJ

ø12, ø16, ø20




Construction

Double acting

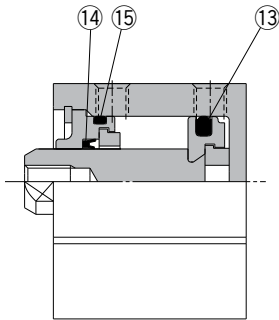

Without magnet

 Single acting, spring return

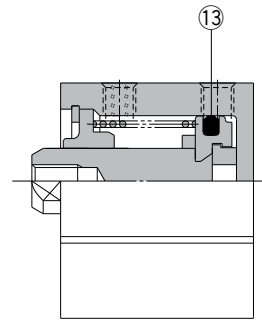

Without magnet

* The numbers are the same as the "Construction" of the Best Pneumatics No.2 Series CUJ.

Seal Kit List

No.	Description	Material	Note
⑬	Piston seal	NBR	
⑭	Rod seal		
⑮	O-ring		

*[BLUE](#) links will lead to purchase pages.

Replacement Parts: Seal Kit

Bore size (mm)	Kit no.	Contents
Double acting		
12	CUJB12-PS	Set of left nos. ⑬, ⑭, ⑮ and grease pack.
16	CUJB16-PS	
20	CUJB20-PS	

* Seal kit ⑬ to ⑮ comes as a set. Use the kit number for each bore size.

Single acting, spring return

12	CUJB12-S-PS	Set of left nos. ⑬ and grease pack.
16	CUJB16-S-PS	
20	CUJB20-S-PS	

* Use the following part number for ordering a grease pack only.

Grease pack part no.: GR-L-005 (5 g)