

Air Cylinder/Direct Mount Type: Double Acting, Single Rod


Series CG1R

ø20, ø25, ø32
ø40, ø50, ø63


Replacement
Procedure is
P.281

Construction

Standard, bottom mounting, with rubber bumper

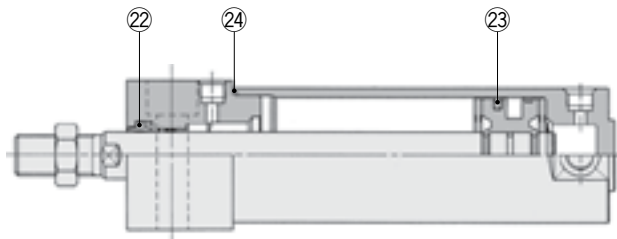

With air cushion

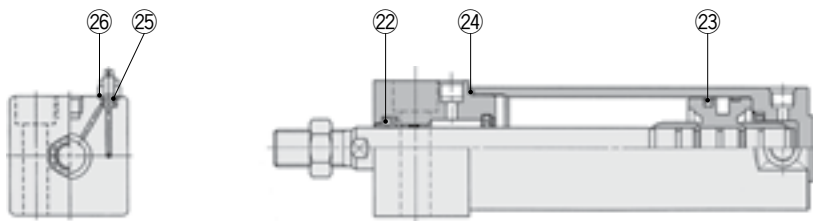

* The numbers are the same as the "Construction" of the Best Pneumatics No.2 Series CG1R.

Seal Kit List

No.	Description	Material	Note
22	Rod seal	NBR	
23	Piston seal		
24	Tube gasket		
25	Valve seal		
26	Valve retainer gasket		

Disassembly/Replacement

⚠ Caution

1. Do not replace the bushings.

The bushings are press-fit. To replace them, they must be replaced together with the cover assembly.

2. To replace a seal, apply grease to the new seal before installing it.

If the cylinder is put into operation without applying grease to the seal, it could cause the seal to wear significantly, leading to premature air leakage.

3. Cylinders with ø50 or larger bore sizes cannot be disassembled.

When disassembling cylinders with bore sizes ø20 through ø40, grip the double flat part of either the head cover or the rod cover with a vise and loosen the other side with a wrench or a monkey wrench, etc., and then remove the cover. When re-tightening, tighten approximately 2 degrees more than the original position.

(Cylinders with ø50 or larger bore sizes are tightened with a large tightening torque and cannot be disassembled. If disassembly is required, please contact SMC.)

*[BLUE](#) links will lead to purchase pages.

Replacement Parts: Seal Kit

Bore size (mm)	Kit no.	Contents
With rubber bumper		
20	CG1N20-PS	Set of left nos. 22, 23, 24.
25	CG1N25-PS	
32	CG1N32-PS	
40	CG1N40-PS	
With air cushion		
20	CG1A20-PS	Set of left nos. 22, 23, 24, 25, 26.
25	CG1A25-PS	
32	CG1A32-PS	
40	CG1A40-PS	

Note) Order with a part number for each type and bore size.

* The seal kit includes a grease pack (10 g).

Order with the following part number when only the grease pack is needed.

Grease pack part no.: GR-S-010 (10 g)