


# Series MB□Q

ø32, ø40, ø50  
ø63, ø80, ø100

Replacement  
Procedure is  
P.284

## Construction

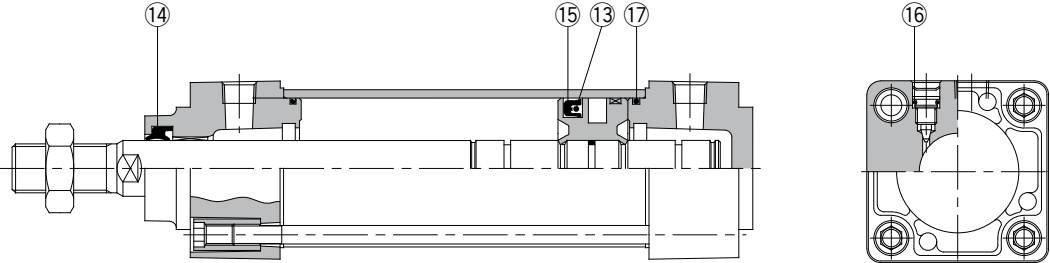

\* The numbers are the same as the "Construction" of the Best Pneumatics No.2 Series MB□Q.

\*[BLUE](#) links will lead to purchase pages.

### Seal Kit List

No.	Description	Material	Note
⑬	Back-up O-ring	NBR	16 is a non-replaceable part, so it is not included in the seal kit.
⑭	Rod seal		
⑮	Piston seal		
⑯	Cushion valve seal		
⑰	Cylinder tube gasket		

### Replacement Parts: Seal Kit

Bore size (mm)	Kit no.	Contents
32	<a href="#">MBQ32-PS</a>	Set of left nos. ⑬, ⑭, ⑮, ⑰.
40	<a href="#">MBQ40-PS</a>	
50	<a href="#">MBQ50-PS</a>	
63	<a href="#">MBQ63-PS</a>	
80	<a href="#">MBQ80-PS</a>	
100	<a href="#">MBQ100-PS</a>	

\* Seal kits consist of items ⑬, ⑭, ⑮ and ⑰, and can be ordered by using the seal kit number corresponding to each bore size.

\* Trunnion type should not be disassembled.

\* Since the seal kit does not include a grease pack, order it separately.

Grease pack part no.: GR-L-005 (5 g), GR-L-010 (10 g), GR-L-150 (150 g)