

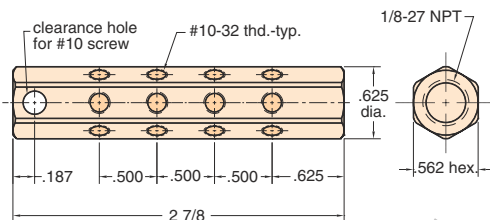


MANIFOLDS

MAN-12



12-Port Manifold

**Material:** Brass**Thread:** Tapped ports: 1/8" standard pipe tapped inlet**Mounting:** 13/64" diameter mounting hole

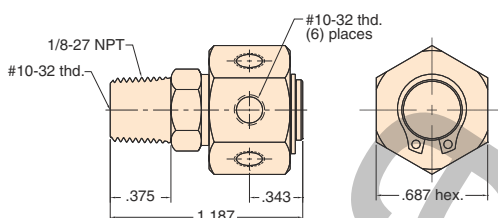
Use: May be mounted on jigs, fixtures or machinery to provide up to 12 convenient 10-32 outlets from one standard 1/8" pipe connection; may be used with any Clippard 10-32 fittings, quick connects and many other devices; unused ports can be plugged with screw plug 11755

Options: (-NP)

MRM-6



6-Port Rotary Manifold

**Material:** Brass and stainless steel**Thread:** 1/8 NPT for inlet is also tapped 10-32; outlet consists of 6 ports tapped 10-32**Seals:** Buna-N o-ring furnished**Working Range:** 250 psi max.**Air Flow:** 5.9 scfm @ 50 psig

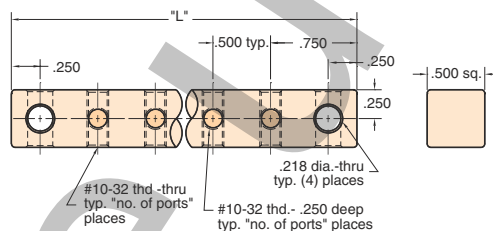
Use: May be used either as a rotary joint or as a stationary manifold; ideal for distributing air or liquid from center column onto a rotary index table; unused ports may be plugged with screw plug 11755 and gasket

Low RPM applications

15028-□



Miniature Terminal Blocks

X to be replaced with: 4, 6, 8, 10

15028-4 pictured above

Material: Anodized aluminum**Thread:** 10-32 tapped ports**Mounting:** With two 7/32" diameter mounting holes

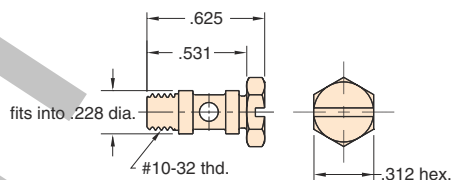
Use: To help organize connections in circuit boxes, control panels and machine piping; cross drilled mounting holes permit mounting of "T" in any direction; use screw plug 11755 to plug unused ports

Model #	# of Ports	A	L
15028-4	4	2 1/2"	3"
15028-6	6	3 1/2"	4"
15028-8	8	4 1/2"	5"
15028-10	10	5 1/2"	6"

12292



Miniature Manifold Stud

**Material:** Stainless steel**Thread:** 10-32**Seals:** Buna-N o-ring and gasket furnished

Use: This hollow, cross-drilled stud is useful for connecting specially made manifolds to multiple ports of valves or cylinders, eliminating need for external fittings with hose

Tips On Using Minimatic® Fittings

Hose or Tubing Size

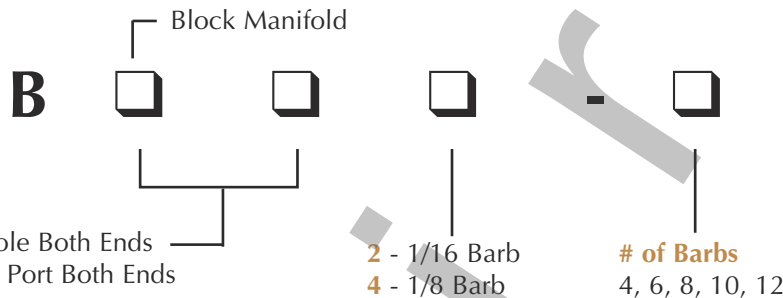
The use of different sizes of hose or tubing in your circuits deserves some care and consideration. In general, follow this guide for the size of hose or tubing you use.

For air logic circuits, we recommend:

1/16" ID for pilots

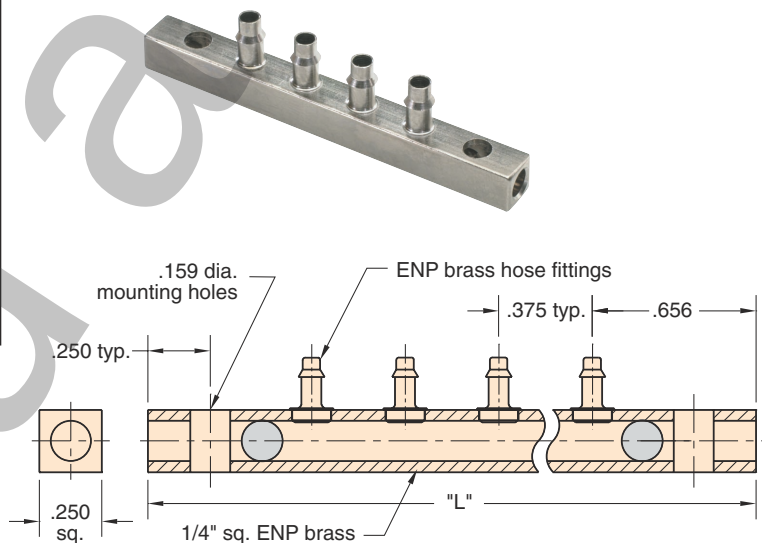
1/8" ID for supplies and outputs

B□□□-□



Part #	# of Stations	Fitting Size
BHH2-04	4	1/16" ID Hose Barb
BHH2-06	6	
BHH2-08	8	
BHH2-10	10	
BHH2-12	12	
BHH4-04	4	1/8" ID Hose Barb
BHH4-06	6	
BHH4-08	8	
BHH4-10	10	
BHH4-12	12	

The BHH series has mounting holes for #8 screws at each end. One of the stations must be used as the air supply to the manifold.



Part #	# of Stations	Fitting Size
BTT2-04	4	1/16" ID Hose Barb
BTT2-06	6	
BTT2-08	8	
BTT2-10	10	
BTT2-12	12	
BTT4-04	4	1/8" ID Hose Barb
BTT4-06	6	
BTT4-08	8	
BTT4-10	10	
BTT4-12	12	

The BTT series has 10-32 holes at each end for inline mounting. One end may be used as the air supply to the manifold and the other end plugged.

